




HTC Desire 816 Top Speaker Replacement

Written By: Edward Garcia




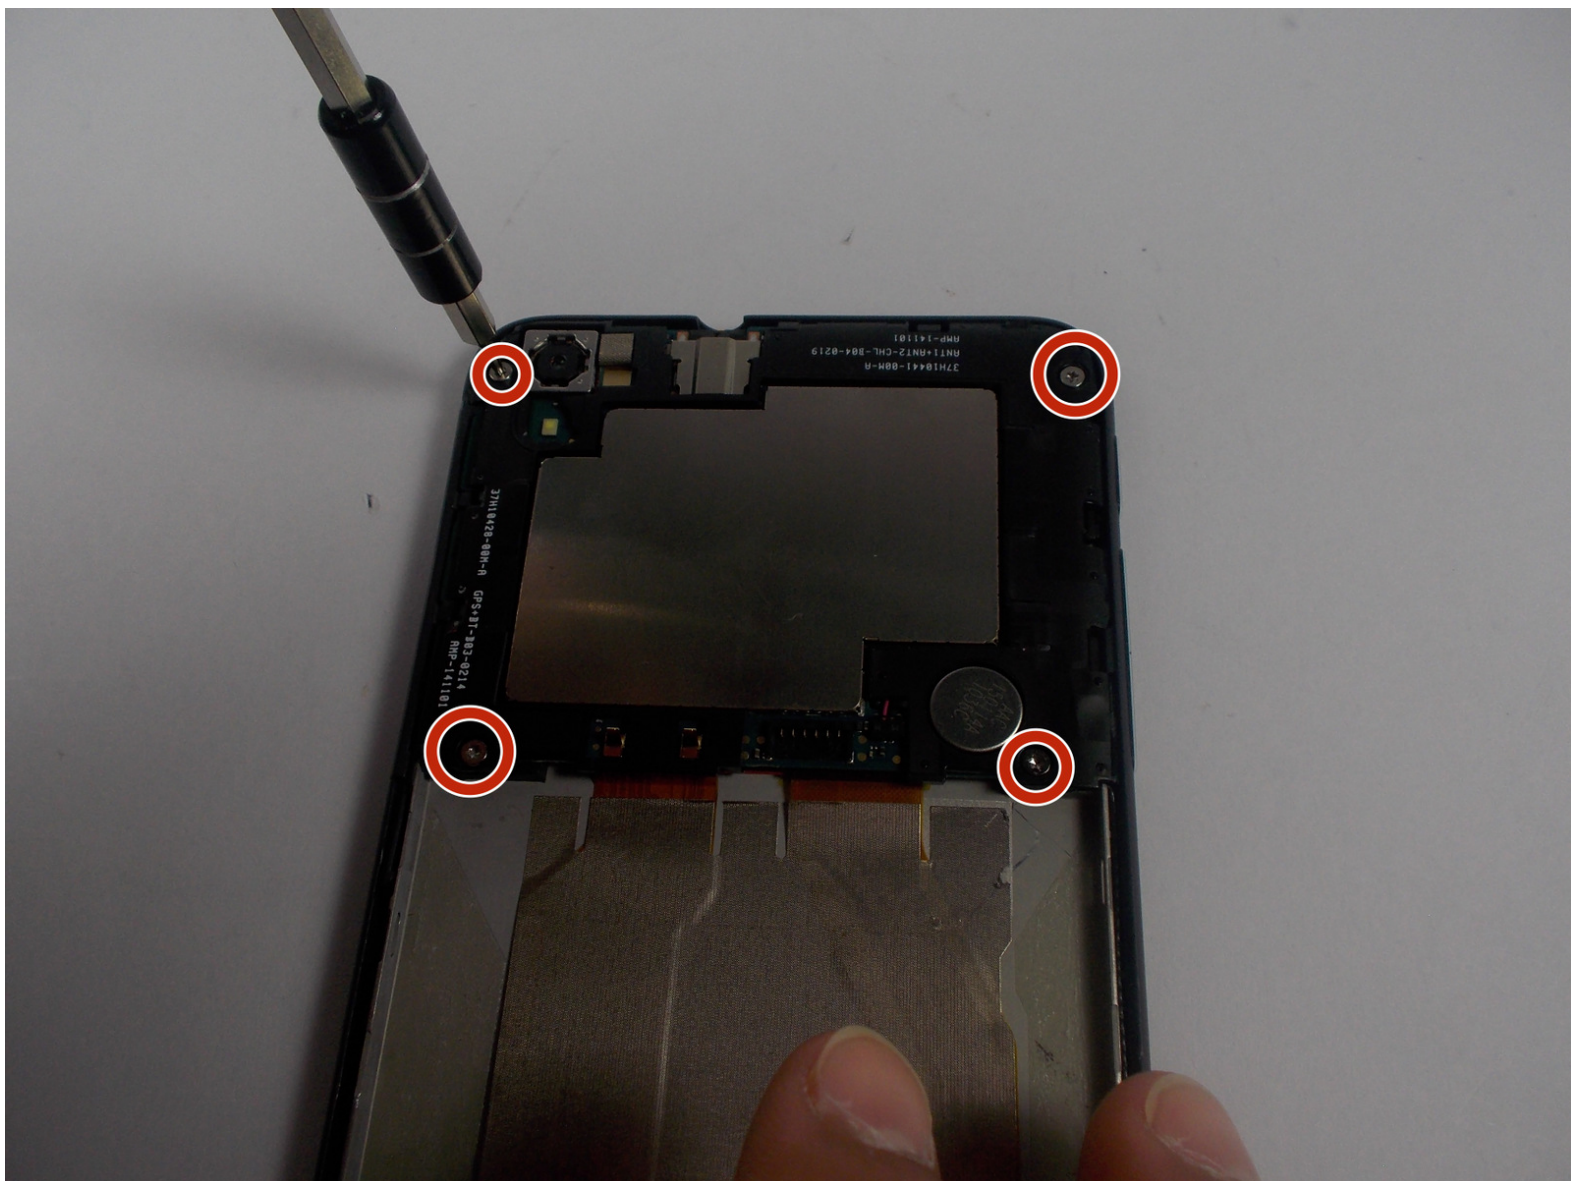

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Top Speaker

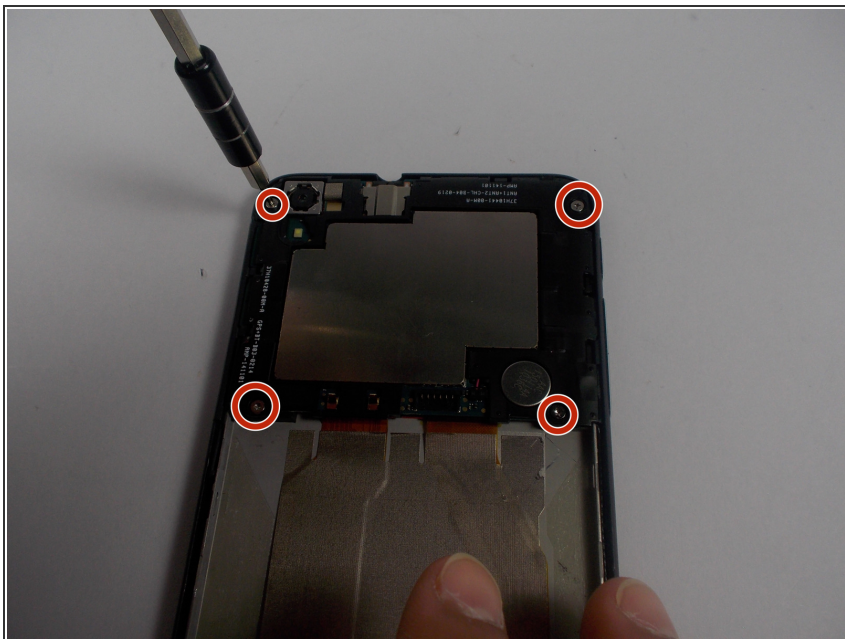


- Using the T5 screw driver, unscrew all of the screws that are holding down the black plastic casing.

Step 2

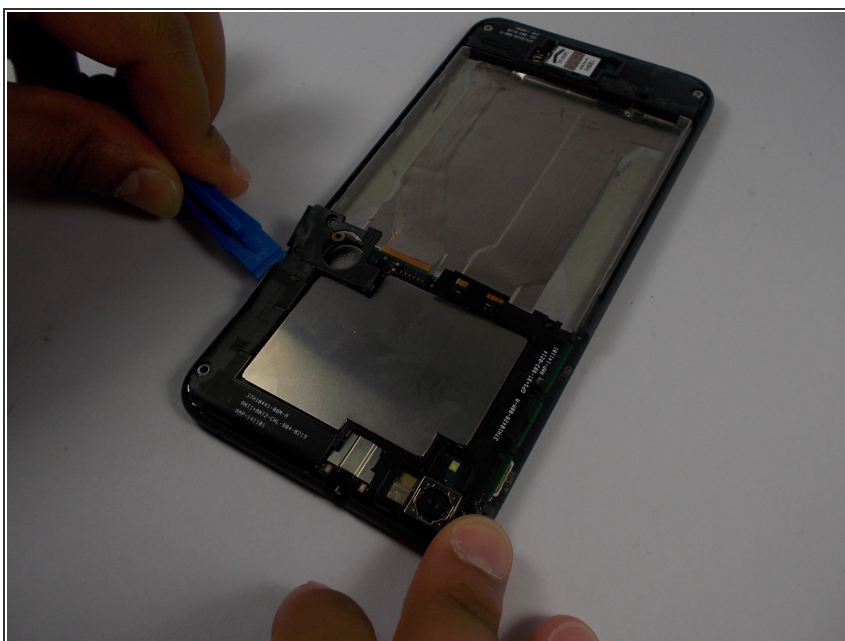


- Remove the black plastics casing surrounding the motherboard with a plastic opening tool.

Step 3

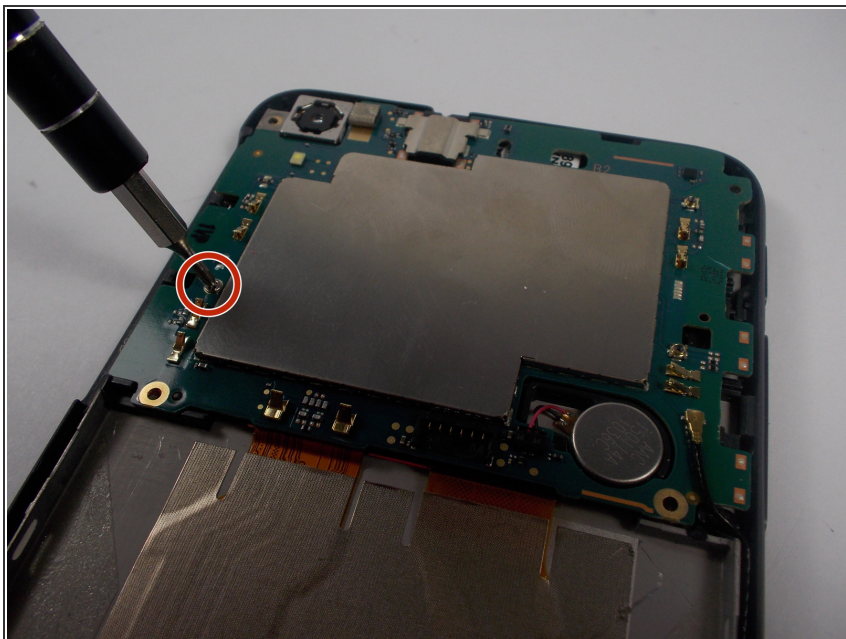

- Using the PH000 screwdriver head, unscrew the screw that is holding down the motherboard. It is located on the left side of the motherboard.

Step 4

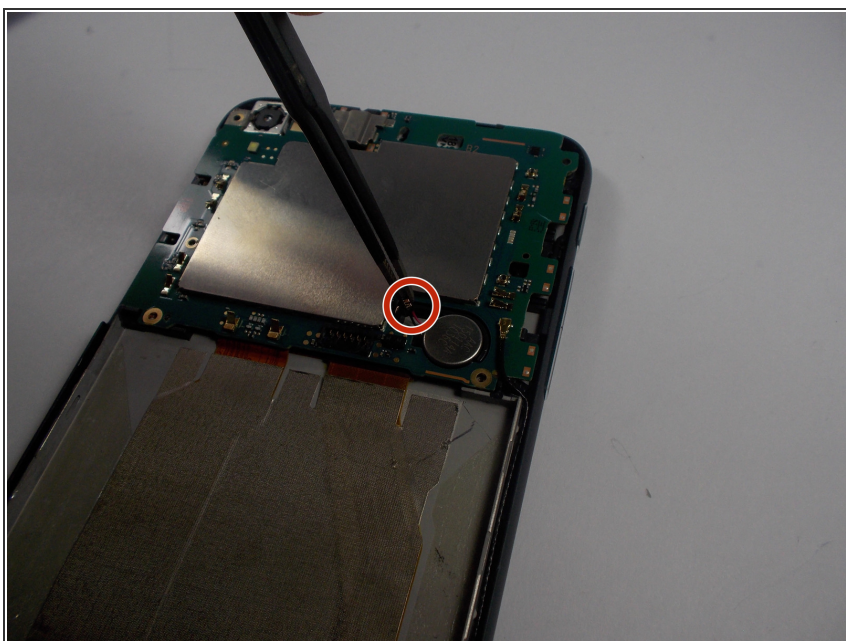


- Using a pair of tweezers disconnect the battery from the motherboard so that the motherboard could later be removed from the device.

Step 5



- Once you have flipped the motherboard over, you should be able to locate the speaker at the top of the phone.

Step 6

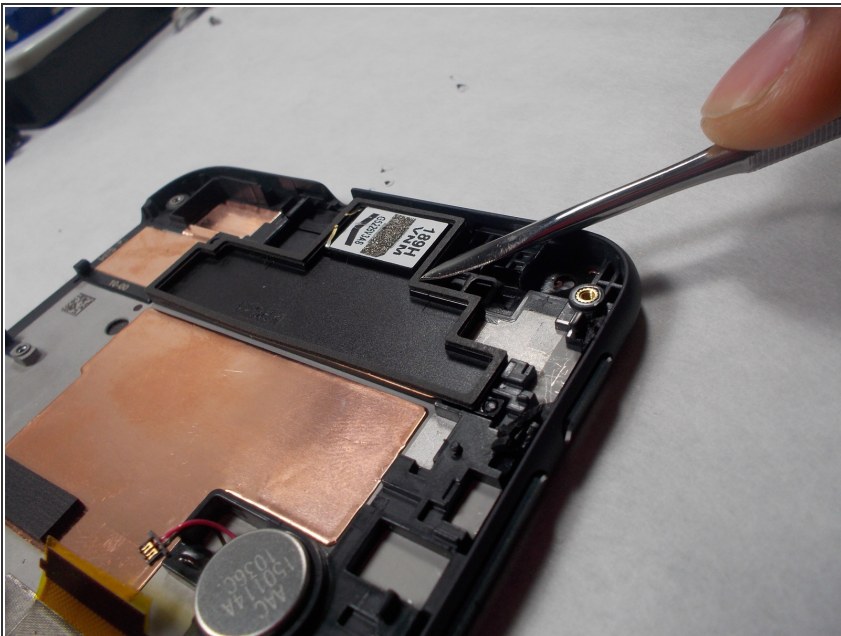

- Remove top speaker gently with a pair of tweezers.
- ⓘ The speaker is also connected to a flat black plastic casing which will also be removed as you lift the speaker

To reassemble your device, follow these instructions in reverse order.